


# Balanced Layout

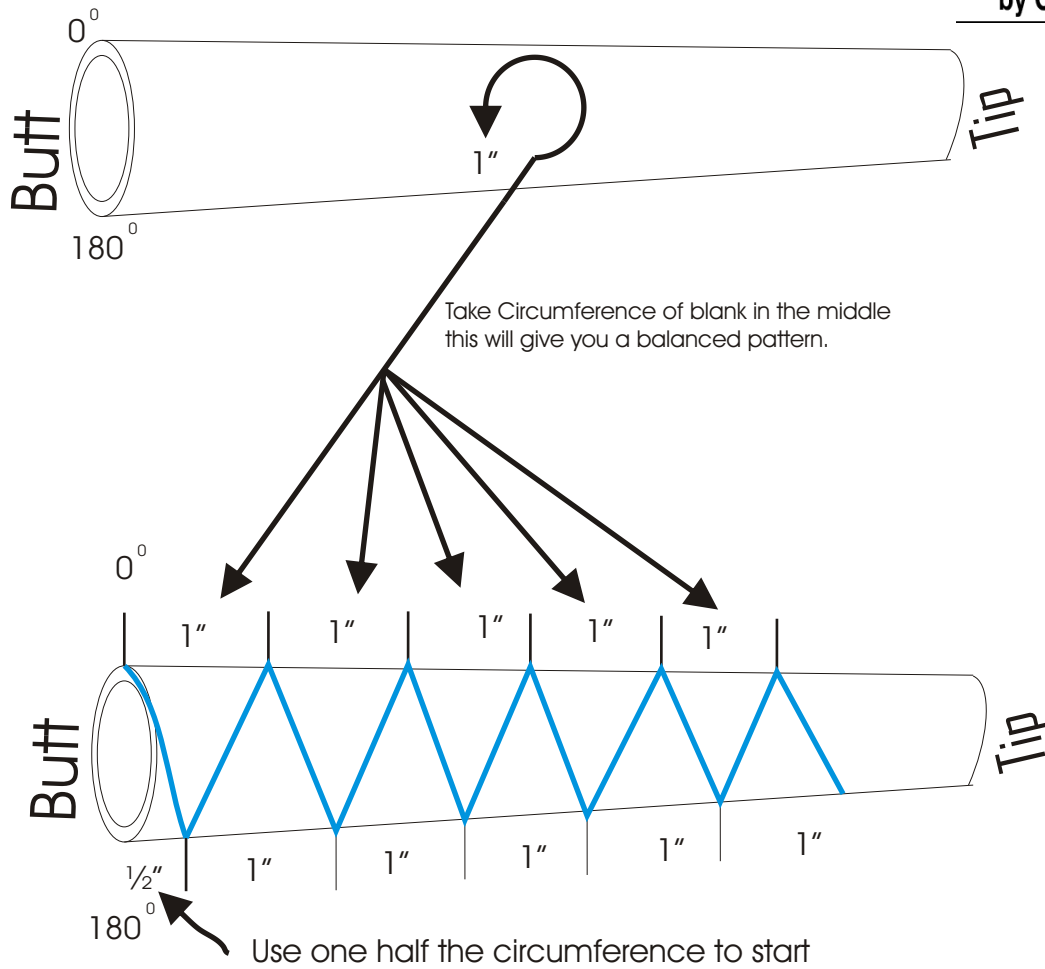

Use this to layout for open wraps that you want all the patterns to be almost the same size. Good for diamond wrap.

To ELONGATE ( stretch ) your pattern add to your circumference measurement.

To Compress your pattern subtract from the circumference measurement.